



Parts list

Item Number	Part Number	Description	No. Of
1	B02075	Circlip, Spirolinx	1
1A	B02078	Circlip, Spirolinx	1
2	1505108	Top Cap Assembly	1
3	15044114	Push Button	1
4	15044111	Plunger	1
5	15044104	Top Cap Assembly	1
6	15044112	Spring	1
7	1260/7	Pawl Spring	8
8	15044106	Closing Ring	1
9	15044113	Spring	2
10	B2083	Circlip	1
11	15044105	Clutch Plate	1
12	1300/24	Plunger	2
13	15044118	Coilset	2
14	1300/20	Spring	2
15	1505101	Center Stem	1
16	15048105	Spacer	1
17	B0114	Socket Head Cap Screw 3/8" - U.N.C.	3

23	15025107	Spacer	1
24	15016107	Spindle End Cap	1
25A	15055104	Base, Bronze	1
25B	15055204	Base, Alloy	1
26	1301/22	Dowel	1
27	1301/17	Dowel	2
28	B1506	Spirol Pin	2
29	15055105	Bridge Piece	1
30	B0515	Countersunk Screw X" - U.N.C. x 1/4" long	1
31	15048104	Ratchet Gear	1
32	1301/10	Shaft	1
33	1301/11	Washer	1
34	1264/8	Pawl	4
35	1301/17	Pawl Gear	1
36	B2077	Circlip	1
37	1301/8	Ratchet Gear	1
38	1301/SA2	Cage Assembly	3
39	1301/19	Washer	1
40	1264/8	Shaft	1
41	1300/22	Washer	1
42	1300/SA2	Cage Assembly	1
43	1300/7	Pawl Gear	1
44	1300/7	Ratchet Gear	1
45	15055118	Washer	1
46	15044116	Drum Washer	1

47	1301/SA3	Cage Assembly	3
48A	15056102	Drum, Bronze	1
48B	15055302	Drum, Alloy	1
48C	15055302	Drum, Stainless Steel	1

Spares Parts Kits

Model 55
Cat No 19755400

- Contents
- 1 x Pin Pt No 15044119
 - 1 x Washer Pt No 1301/19
 - 1 x Washer Pt No 1301/11
 - 1 x Washer Pt No 1300/22
 - 1 x Washer Pt No 15055119
 - 1 x Washer Pt No 15025107
 - 2 x Plunger 1300/24
 - 1 x Spring Pt No 1300/20
 - 1 x Plunger Pt No 15044111
 - 1 x Spring Pt No 15044112
 - 4 x Pawl Pt No 1264/8
 - 4 x Pawl Pt No 1260/8
 - 8 x Spring Pt No 1260/7
 - 1 x Circlip Pt No B2075
 - 1 x Circlip Pt No B2083
 - 2 x Spring Pt No 15044113

C2 Replace plunger (4) and compression spring (6).
D2 Engage closing ring (8) with compression spring and plunger and holding pawls closed, insert ring into recess.
E2 Ensure closing ring (8) seats correctly at base of recess. Re-insert circlip (10) and engage with groove provided.
F2 Engage two springs (9) with pillars provided on closing ring (8).
G2 Check top cap mechanism for correct operation, as prescribed in point (F). Oil lightly.
H2 Reassemble and check winch as points N.P.
I2 If winch fails to perform correctly, recheck servicing technique or contact your nearest Lewmar service point.